

INITIAL OPERATION

3.1 Suspension of tool:

If the tool is equipped with a suspension (Part No. 71), it can be suspended horizontally or vertically on a spring balancer.



3.2 Compress air adjustment:

At the end with the inlet adjustment device of pneumatic motor, it could use a flat screw driver to adjusted as appropriate.



OPERATING INSTRUCTIONS

4.1 Feeding the strap through the seal.



4.2 Winding strap around the package.



4.3 Connecting strap to the seal.



4.4 Bending strap as a fix point



4.5 Hold tool, pressing handle connect strap.



4.6 Hold tool, pushing tensioner valve lever.



4.7 The strap will be tightened.



4.8 Hold tool, pushing sealing valve lever.



4.9 Releasing the tool



The strapping samples are showed as below:

