


S1 Foot Faucet Installation Instruction

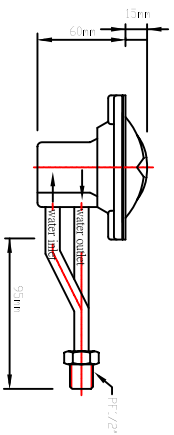

Step 1 : Keep screws protection tap on the stainless steel plate to prevent dust or cement into the screws while plumbing.


Step 2 : Connect the LOWER TUBE to water inflow pipe and UPPER TUBE to water outflow pipe.

Step 3 : Elate the SOLID BRASS BODY SURFACE to the floor level (tile level), make sure the floor level (tile level) not higher than the stainless steel plate and it is not tilted, then fix it with cement.


Step 4 : Remove screws protection tap when all jobs are finished and ready to use.

D. Examples of installation:


Example 1

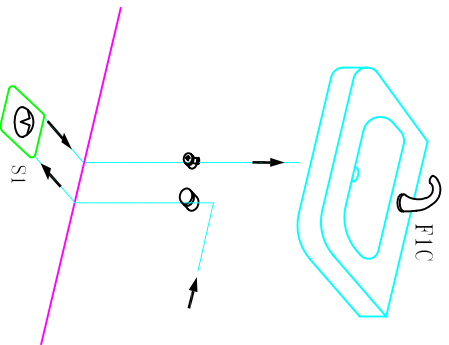


Example 2

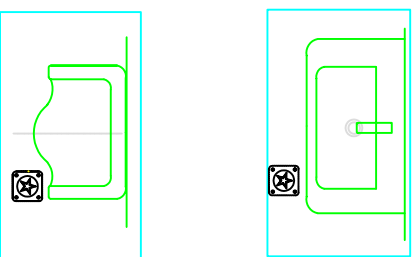


Example 3

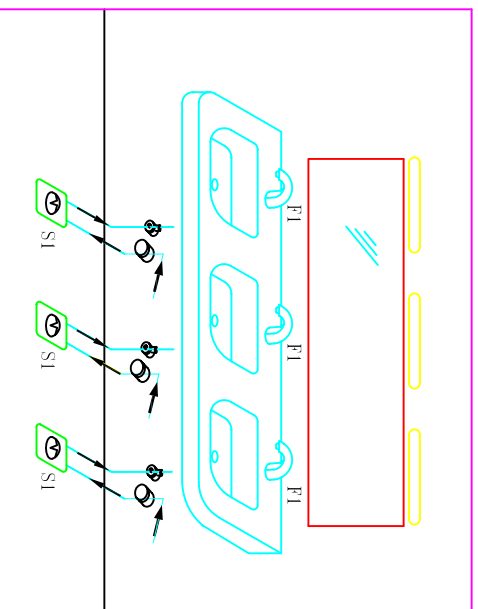

Example 4

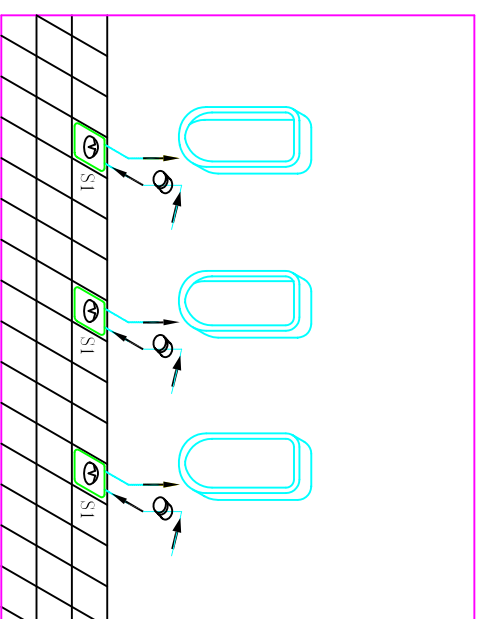

Example 5

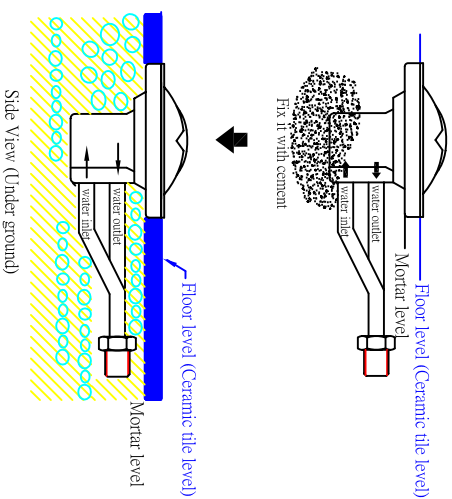

Example 6: S1 + bronze Y-strainer valve (for dirty water)

